

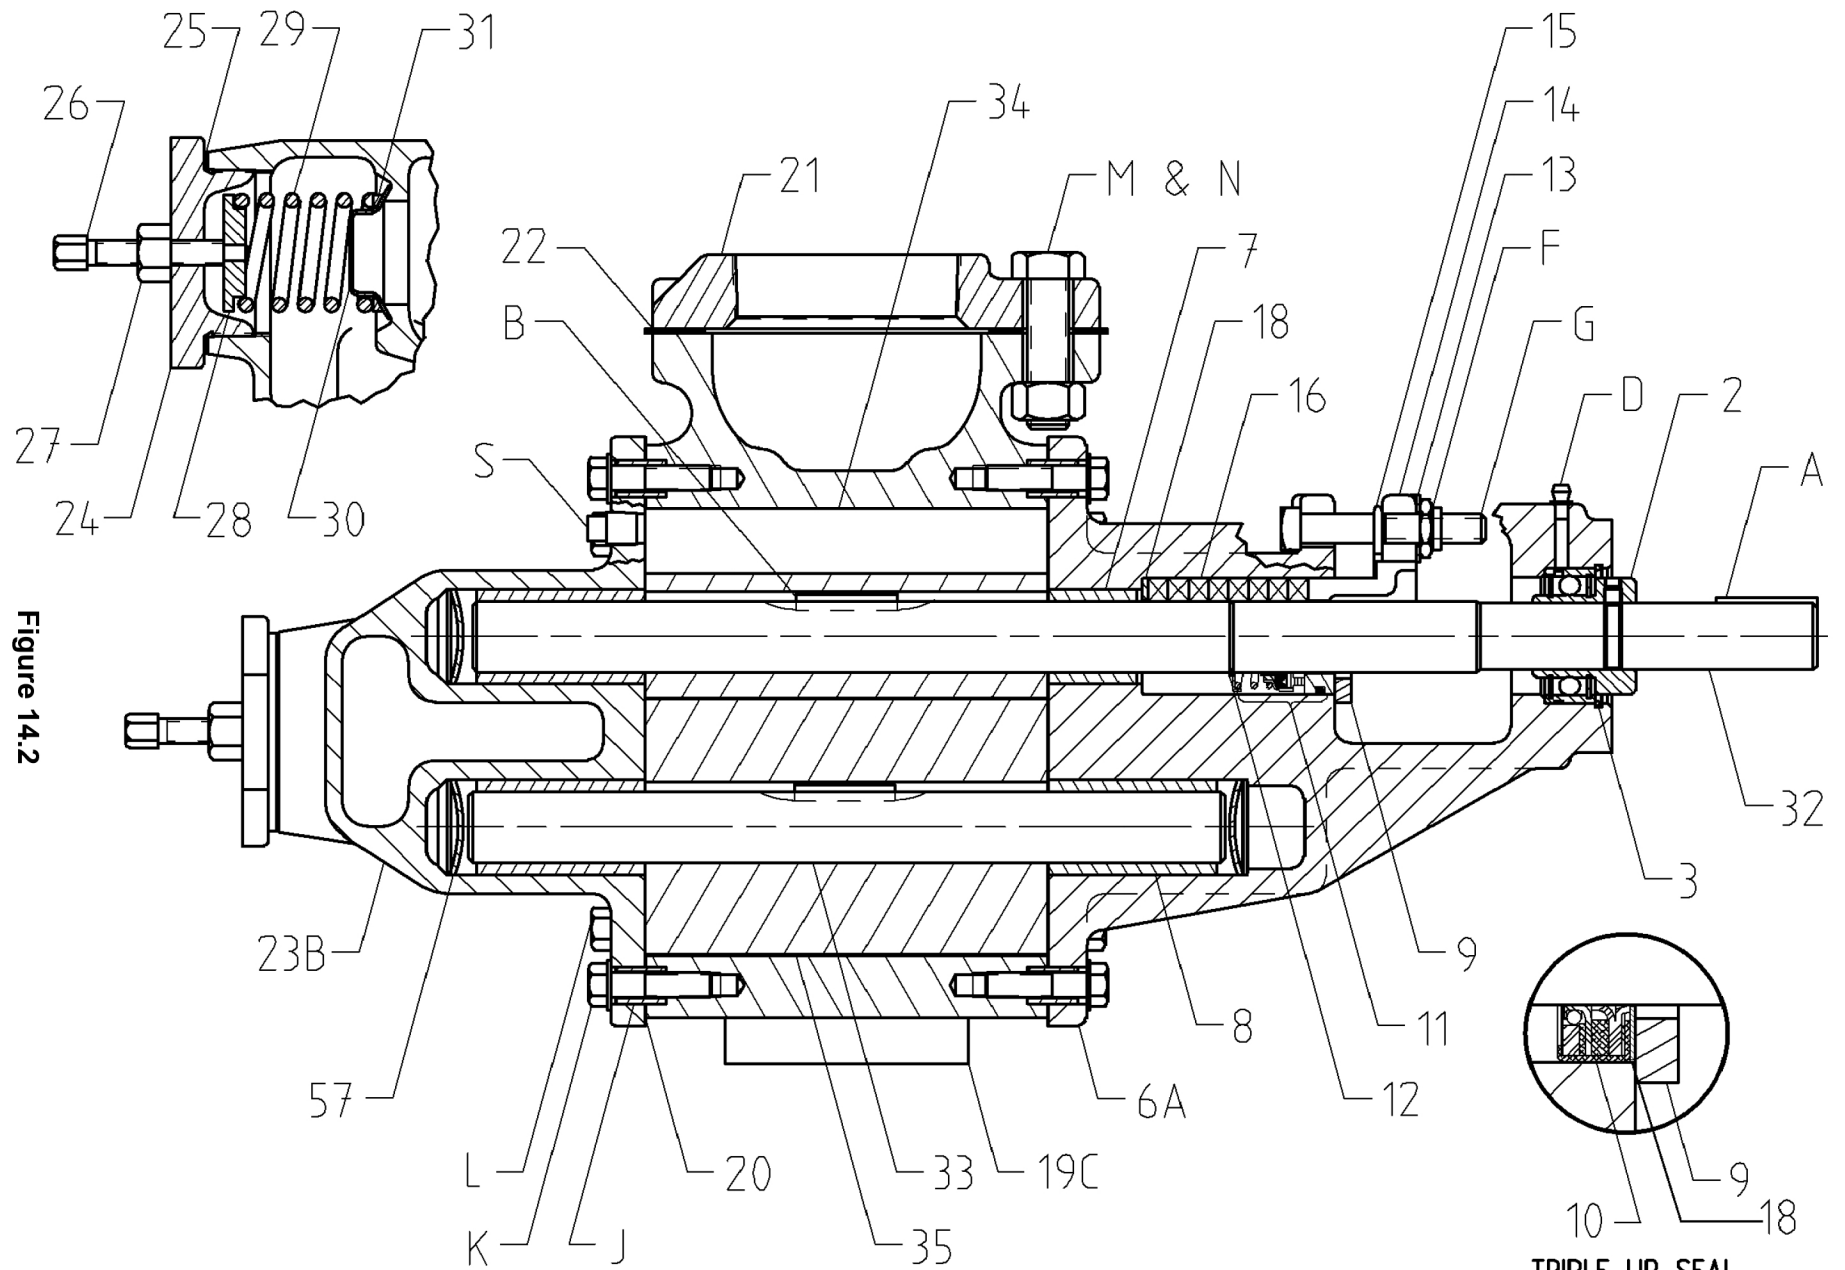


Figure 14.2

3511-4722 HB.F.RV

14. PARTS LIST

2. Ball Bearing	25. Relief Valve Cap, Gasket	E. Hex Head Cap Screw, Seal Retainer to Backplate
3. Retaining Ring, Bearing Cage	26. Adjusting Screw	F. Locknut
6. Backplate A. Standard B. Jacketed	27. Nut, Lock and Seal	G. Square Head Bolt
7. Bearing, Short	28. Spring Guide	H. Pipe Plug, Backplate
8. Bearing, Long	29. Spring	J. Dowel Pin
9. Seal Retainer	30. Poppet	K. Washer Head Cap Screw, Endplates to Case
10. Triple Lip Seal	31. Adapter	L. Hex Head Cap Screw, Endplates to Case
11. Mechanical Seal	32. Drive Shaft	M. Hex Head Cap Screw, Flange Nut, Flange
12. Retaining Ring, Mechanical Seal	33. Idler Shaft	S. Pipe Plug, Faceplate
13. Packing Gland Clip	34. Drive Gear	T. Anti-rotation Pin
14. Packing Gland	35. Idler Gear	AJ. Drive Screw
15. Spring Clip	36. Retaining Ring, Gear (H) A. Backplate End B. Faceplate End	AK. Ball Handle, Double Setting Relief Valve only
16. Packing Ring	57. Expansion Washer	AL. Stud, Double Setting Relief Valve only
17. Lantern Ring (Not Shown)	58. Cam, Double Setting Relief Valve only	AM. Self Locking Nut, Double Setting Relief Valve only
18. Packing Washer	59. Operating Piston, Double Setting Relief Valve only	AN. Hex Head Cap Screw, Double Setting Relief Valve only
19. Case A. ANSI Flanged – Straight Through B. Threaded Port – Right Angle C. Flanged – Right Angle D. Flanged – Straight Through E. Flanged – Footless (22 SB only)	60. Locator Ring	AP. O-Ring, Double Setting Relief Valve only
20. Case Gasket	WRN2 Warning Plate, RV Style Relief Valve	
21. Flange	WRN3 Warning Plate, RV Style Relief Valve	
22. Flange Gasket	WRN4 Warning Plate, RV Style Relief Valve	Type MBH Hydraulic Drive Bracket Assembly only
23. Faceplate A. Plain B. RV Style Relief Valve C. Jacketed RV Style Relief Valve D. BV Style Bi-Directional Relief Valve	WRN5 Warning Plate, BV Style Relief Valve	61. Bracket
24. Relief Valve Cap	A. Drive Key	62. Rigid Coupling
	B. Key, Gear	63. Retaining Ring
	D. Lube Fitting	64. Socket Head Cap Screw